

# **G10**

## **User's Guide**



**[www.icemobile.net](http://www.icemobile.net)**

Dear Users:

Thank you for buying ICEMOBILE. This is an User's Guide, in order to make sure you can use it conveniently, please read it before you use the product.



# Content

FCC ID: C89G10

Content .....	2
1 Notes.....	<b>Error! Bookmark not defined.</b>
2 Accessories.....	4
3 Main Functions.....	4
4 Appearance and Buttons.....	5
5 MID Hardware Parameters.....	6
6 Quick Start Guide.....	7
6.1 Keys Function.....	7
6.2 Startup and Shutdown.....	7
6.3 Open and Close of the Screen.....	8
6.4 Usage of Touch Screen.....	8
6.5 Home Page.....	9
6.6 .....	Visit Application
Procedures.....	12
6.7 USB Connection.....	12
6.8 Typing words.....	13
6.9 Operation Technique.....	14
7 Basic Setting.....	15
7.1 Wireless and Internet.....	15
7.2 Display.....	15
7.3 FM Transmission.....	16
7.4 Management of Application Procedure.....	17
7.5 SD Card and MID Storage.....	18
7.6 Date and Time.....	18
7.7 Language Setting.....	19
7.8 .....	About
Tablet.....	20
7.9 Fixed-time Startup and Shutdown.....	20
7.10 Safety Setting.....	21
8 Multi-Media.....	22
8.1 Music.....	22
8.2 Video.....	23
8.3 Photo Gallery.....	24
8.4 Camera.....	25
8.5 Connection of HDMI.....	25
8.6 FM Radio.....	26
9 Communication Function.....	27
9.1 Phone.....	27
9.2 .....	Text
Message.....	28

9.3 Contact List.....	29
10 Internet.....	30
10.1 Browser.....	30
10.2 Email.....	31
10.3 3G Internet.....	33
11 GPS Function .....	33
11.1 GPS Navigation.....	33
12 Other Application Procedures .....	<b>Error! Bookmark not defined.</b>
12.1 Clock .....	34
12.2 Calculator .....	34
12.3 File Manager .....	35
12.4 Recorder .....	37
13 Installation of Procedures.....	38
13.1 Installation.....	38
13.2 Uninstall .....	38
13.3 Update Path .....	388
14 Troubles Shooting .....	39

# 1. Notes:

\* This is a high-density electronic product; please do not dismantle it by yourself.

\* Avoid strong beat and collision.

\* Avoid using this product in the following environments: high and low temperature, humidity, dusty, with strong magnetic and long-term exposure to the sun.

\* Please wipe the product shell use twist dry wet cotton cloth gently; the use of other chemical cleaning is prohibited. This product should keep away from water drop and water splash, so cups filled with liquids should not be placed near the product.

\* Use the headset long time, high volume may cause permanent damage to hearing.

\* Do not use headphones when going across a road, driving a motorcycle or bicycle, in order to avoid traffic accidents.

\* Please use permitted battery, charger and accessories only, the use of any other type of product would be a breach of warranty regulations, and may be dangerous.

\* Please deal with waste machinery and accessories according to local environmental regulations.

\* If you have any questions in the process of using of the product, please contact the local dealer or contact customer service center of our company directly.



\* For the smeared memory loss that is caused by product damage, repair or other causes of product damage, repair, the company is not responsible for it, so please follow the user's guide and timely backup.

## **2. Accessories:**

Power Adapter  
User Manual  
USB Cable  
OTG Cable  
HDMI Cable  
Earphone

## **3. Main Functions**

- Support HDMI 1080P output
- support OTG function, can transmit data and view the files through connecting U disk, mobile HDD etc.
- Multiple network access , support WIFI, enjoy the network life anywhere at any time.
- Support vibration function
- Support APK format installation and application, Mass of software can be downloaded through the "application market" or you can download, install from the PC network.
- Support MP3、M4A、WMA、APE、FLAC、AAC、WAV、AMR、OGG audio formats etc. also support part of LRC lyrics.
- Full hd video decoding support ( 1080P、720P、480P ), video formats support: MKV、AVI、RM/RMVB、WMV、3GP、MOV、MP4、ASF、MPG、DAT、VOB、FLV etc.
- support JPG、JPEG、BMP、PNG etc.
- Support Micro SD card (TF card ),Support 128MB-32GB.

## 4. Appearance and Buttons :



Description of Button Functions			
<b>1</b>	Antenna	<b>2</b>	Earphone jack
<b>3</b>	Micro HDMI Port	<b>4</b>	Micro USB Port
<b>5</b>	TF Card Slot	<b>6</b>	Back Camera
<b>7</b>	G/W SIM Card Slot	<b>8</b>	GSM SIM Card Slot
<b>9</b>	Power on/off	<b>10</b>	Flash light
<b>11</b>	Back Key	<b>12</b>	Volume +/-
<b>13</b>	Speaker	<b>14</b>	Reset
<b>15</b>	Front Camera		





## 5.MID Hardware Parameters

MID hardware parameters		
Processor	MTK 8389 Quad-Core Cortex A9 1.2GHz	
RAM	1GB DDR3	
Storage	Inside 8GB EMMC Flash Support External TF card maximum memory 32GB	
Network	built-in 3G & WIFI 802.11 b/g/n module	
Display Screen	Size	10.1" Capacitive IPS Panel to support 5 points touch
	Resolution	1280*800
O.S	Android 4.2	
Camera	0.3MP front,2.0MP back camera with flash light	
I/O ports	TF card slot,earphone jack,Micro HDMI port,Micro USB port,SIM card slot	
Battery	6000mAh	
Accessories	Power Adapter×1 USB Cable×1 OTG Cable×1 Earphone×1 HDMI cable×1	

# 6.Quick Start Guide

## 6.1 Keys Function

### Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
<b>HOME button</b> (home) 	Click it in any interface will return to main interface.
<b>Back button</b> (back) 	click it in any interface will return to previous menu
<b>Menu button</b> 	This button will display in menu interface.
<b>display recently-used application</b> 	display recently browsed history

## 6.2 Startup and Shutdown

### Startup

Long press **POWER key for three seconds**, you can enter into startup picture. The system enters into screen lock status, please unlock it.

### Shutdown

1. Long press POWER, it will pop up shutdown window.
2. Shut down window contains mute mode, airplane mode and shutdown three options/
3. Click Shutdown is the last step.

 
## 6.3 Open and Close of the Screen

**Screen will be closed on its own when no operation happens.**

1. Screen will be closed on its own if no operation happens for some time to save battery power
2. When screen is open, press POWER key, the screen will be closed immediately.

**Open the screen when it is closed.**

If the screen is closed, short press POWER to open the screen. The screen will be locked. Open it, it will show the picture as below, slide left to unlock and enter into camera, slide right the unlock icon to unlock the screen.

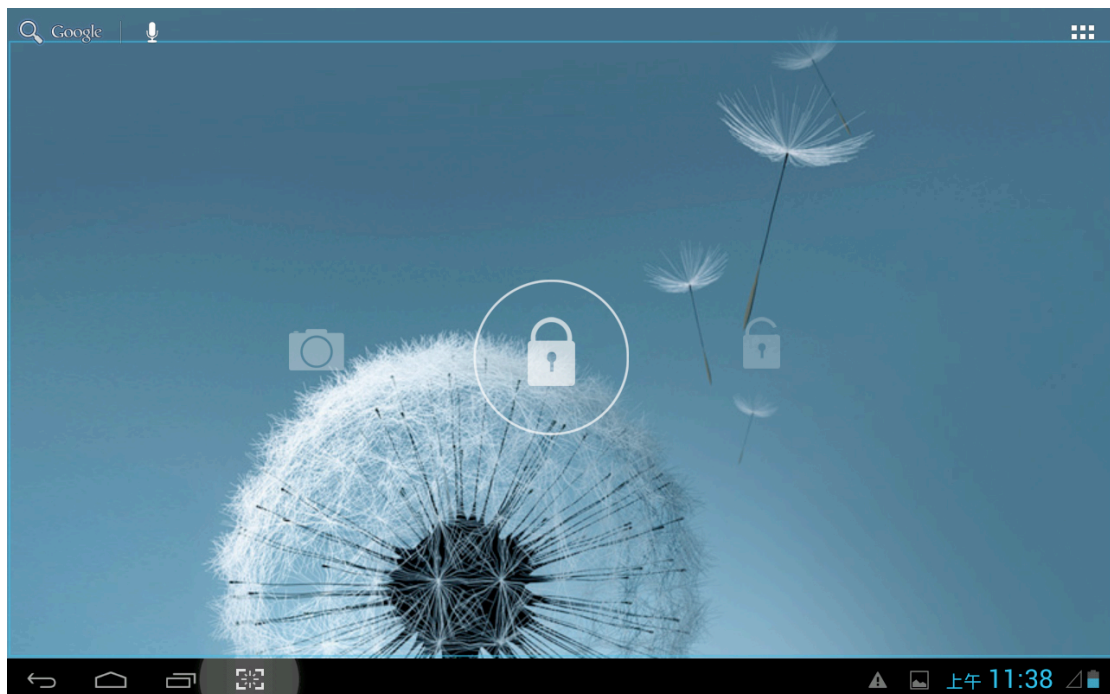

## 6.4 Usage of Touch Screen

**MID operating methods**

There are some methods below to view the main screen, menu and application procedure in your MID.

**Click**

When you want to use the screen keyboard typing or choose application in the main

interface, you only need to touch it by your finger.

### **Press on**

If you want to open some item( text box or the link in the webpage), or shortcut and main procedure move, you can press on this item.

### **Quickly slide or slide**

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

### **Pull**

Before you pull, you need to hold it with strength until you pull it into the position you want.

### **Rotate**

For most pictures, you only need to rotate the MID side-wise to change the screen direction from horizontal to vertical. For instance, when you are typing words or watching movies.

## **6.5 Home Page**

Main interface as below picture, long press the blank and it will pop up Windows to set wallpaper, folder, widgets, and shortcut.



## The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures below:



## The shortcut icons management in desktop application.

The system below Android system have the function of creating folder in desktop, then put the icons into the folders. Android 4.2system makes the function of creating new folder become much easier. Operations are as below:

1. Drag the icons need to be put together on one icon(can also overlay several icons)as Picture below
2. Then click the overlaid icons, the applications can be folded, as Picture below

Click the unnamed folder in the black box, it will pop up the hidden keyboard, the folder name can be renamed (this is similar with Apple IOS system), the icons position can be changed through long press.



### Remove the icons in desktop

1. Long press the icons need to be remove, then on the right above of the screen, it will appear



icons.

2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

### Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will pop-up a window to change the wallpaper.

2. Click the gallery or wallpaper gallery to select the wallpaper.

### Voice search



1. Touch microphone icon.

2. Choose in the Google selection according to your own need.


3. Set the language you need in voice search window, and click **confirm**

 
4. Speak to the micro you need to search, the browser will open the search result list.

**Note:** before voice searching, please make sure your internet is well connected.



## 6.6 Visit Application Procedures

Click  in Picture 3.2, enter into main interface as Picture below, choose the application procedure you want to visit.

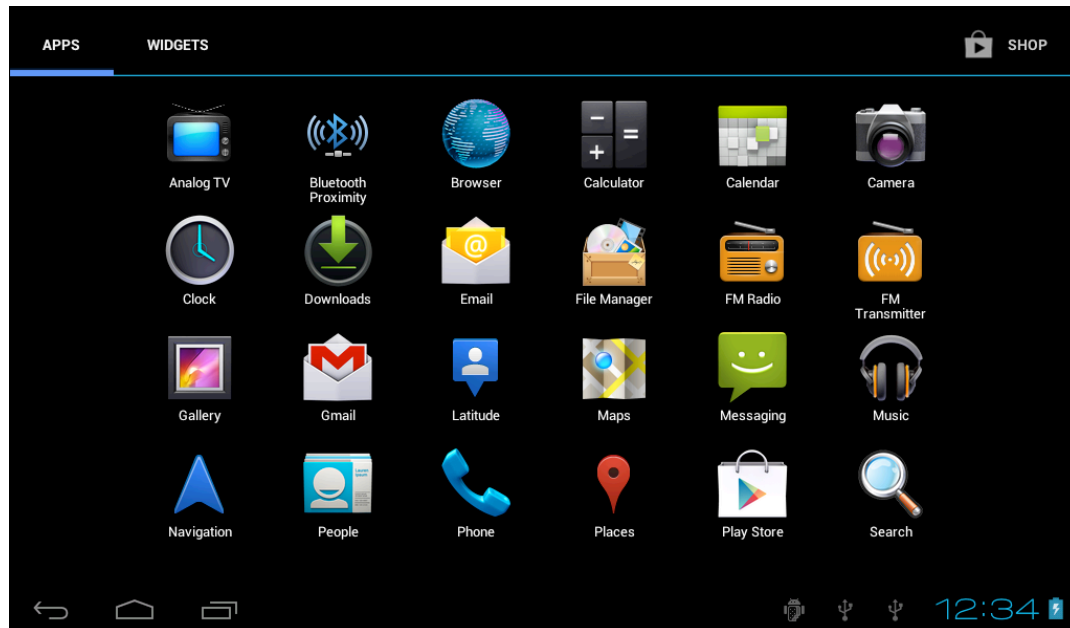


## 6.7 USB Connection

### MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

 1. Connect the MID and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the MID status and reminder to learn how to open the board.
3. In the reminder board, click the “USB Connected”, it will be as below Picture , then click “open USB storage configuration”.
4. Now the USB is connected successfully.

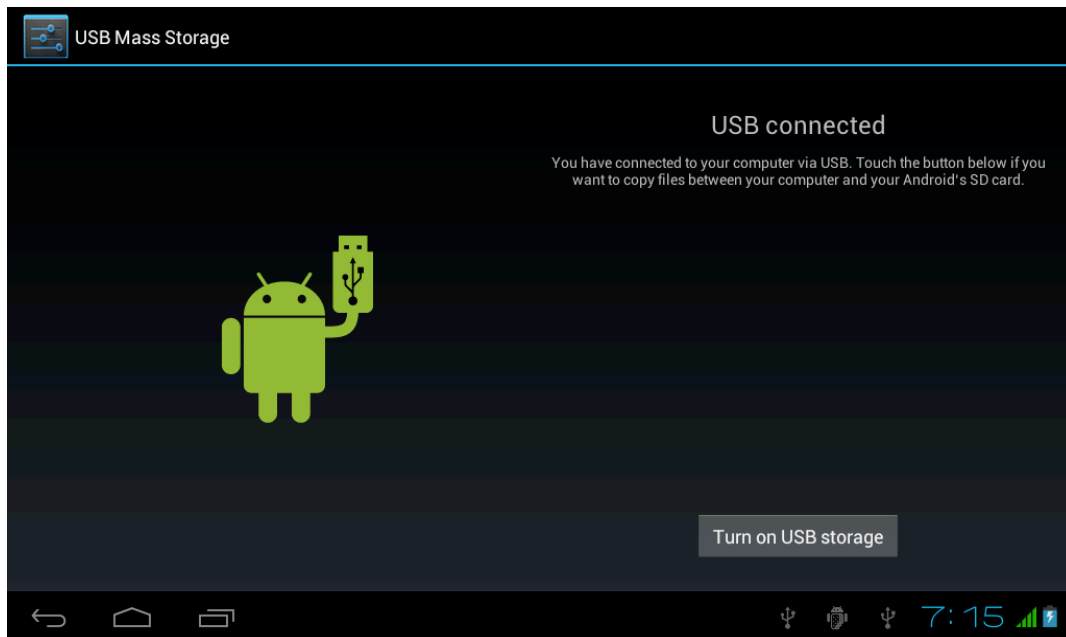

### **Copy the document into memory card**

1. Connect the MID to computer with USB cable.
2. As MID storage configuration, it is connected with computer successfully.
3. Open the “My computer” in your computer, check the items in “removable disc”.
4. Copy the documents you need into “removable disc”.
5. After copying finishes, click “shutdown the USB storage configuration” to uninstall.

Notice: 1. When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

2. Before copying, please confirm there is SD card in MID and it can be read.

## **6.8 Typing words**

### **Use the screen keyboard**

When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

1. Android keyboard
2. Google Pinyin

### **Choose the typing method you want**

 
1. Click Setting procedure application.
2. Click Language and Keyboard.

3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Tick the typing method you want.

### Use and switch off input method

All

Go

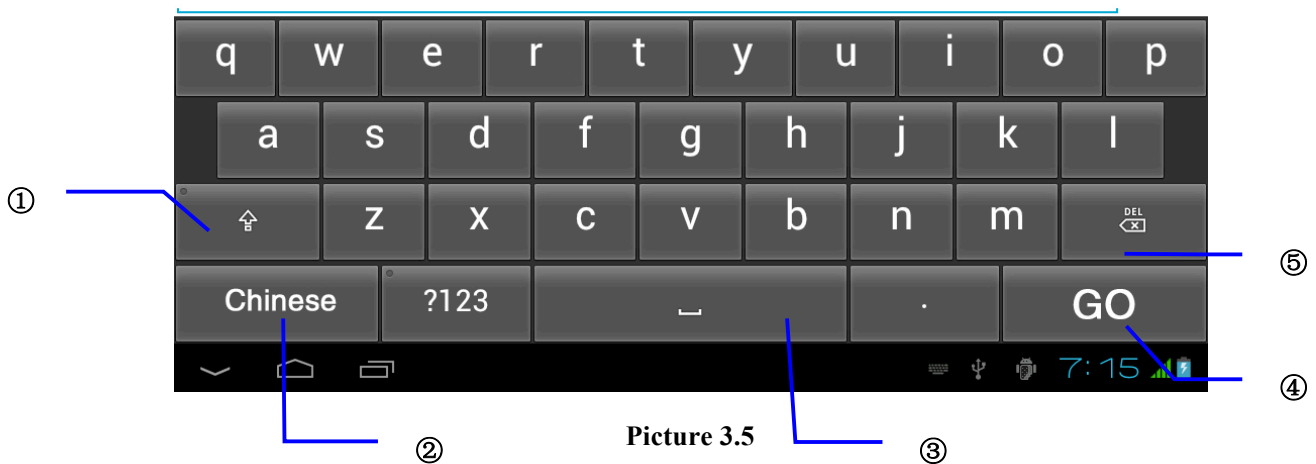

Picture 3.5

1	switch the capital and small letter
2	switch the mode of words input
3	click to insert the space
4	click input to execute
5	delete the character in the left of cursor, click and hold to delete all the characters in the left of the cursor.

## 6.9 Operation Technique

### Enter widgets interface

In the application interface, click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

### Create application shortcut icons in the desktop

In the application interface or widgets interface, long press any icon to switch into desktop

automatically, drag and hold the icon, you can move to any position in the desktop.

 
Remind: System will require you to make more choice and then you can active this widget. If the target position has no space, the widget won't be add in the main screen.

## 7 Basic Setting

### 7.1 Wireless and Internet


#### Connect WiFi

1. In the main menu or interface, choose **setting** application procedure.
2. Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture below
3. Choose the Wi-Fi Internet you want to connect, if it has password, it will pop up the password window, enter password, click connect.

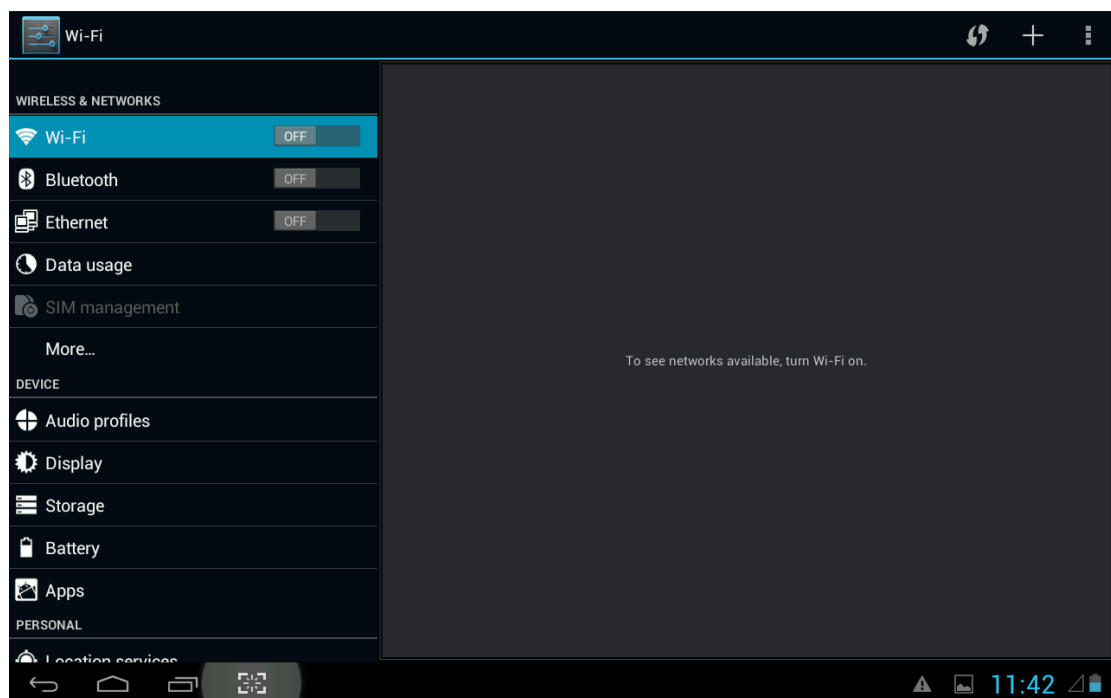

### 7.2 Bluetooth

 Bluetooth can be used to send files and communicate with computers, cellphones at a short range. Before you use bluetooth you must confirm that the net is collected. Just like below:

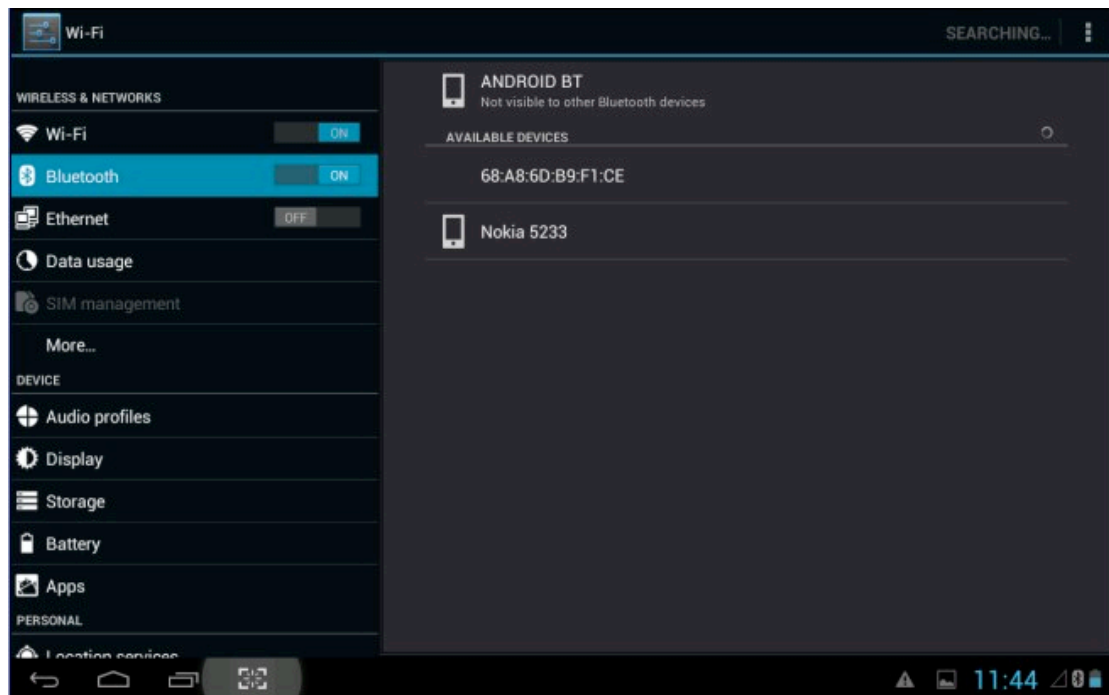


## 7.3 Display

### Adjust the brightness of screen

1. Click **Setting** application procedure.
2. Click **display**, choose brightness.
3. When the brightness setting board pop up, click the portlito to adjust the brightness volume.
4. Click **OK**.


### Adjust the screen standby time

 1. Click Setting application procedure.
2. Click Display.
3. Click **Sleep**.
4. Screen standby time setting popups, choose the time you want to set.

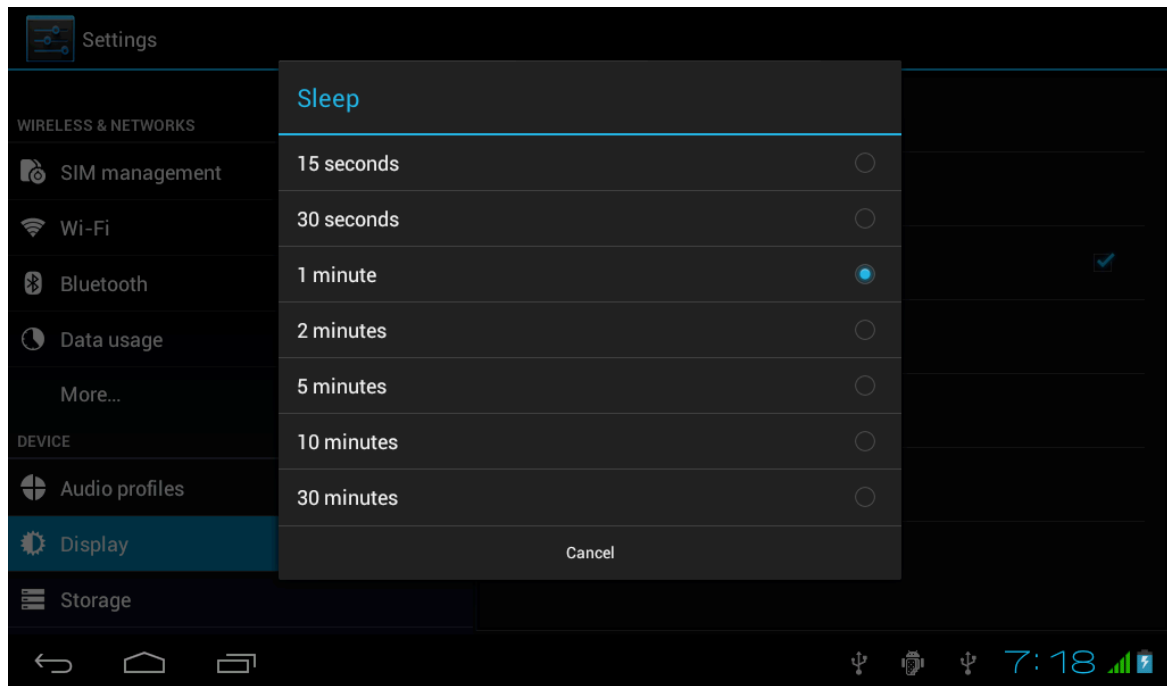

## 7.4 Management of Application Procedure

 1. Choose Setting procedure in the application procedure list.
2. Choose application, after entering, you can manage and delete installed applications.

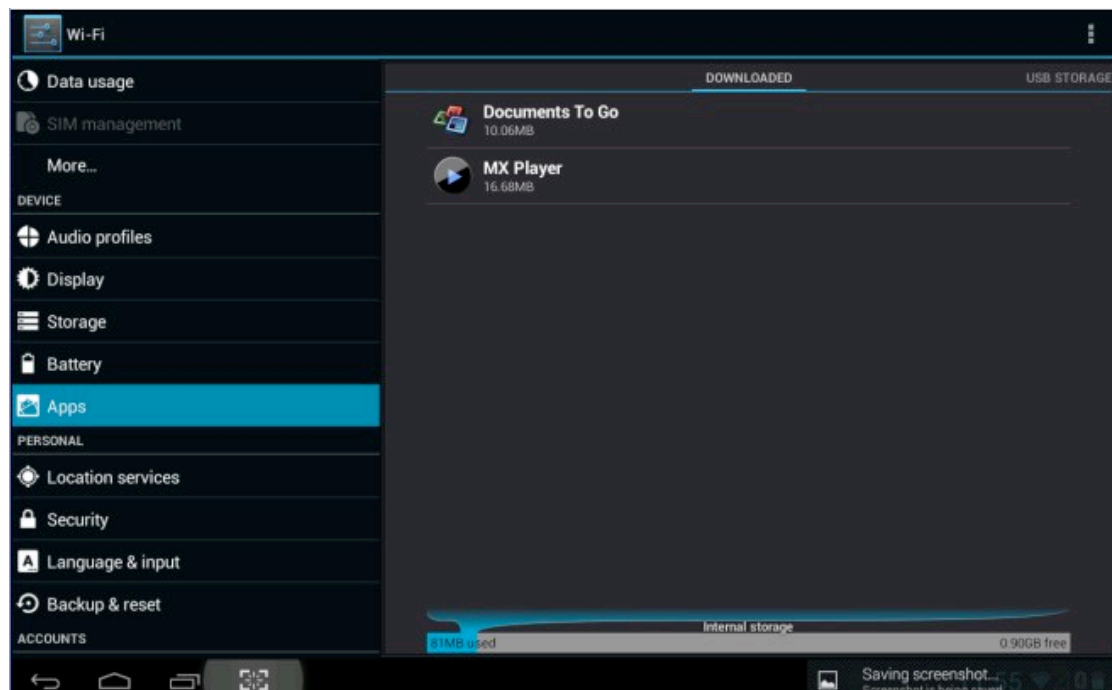

## 7.5 SD Card and MID Storage

 
### Check the SD card and MID available space

1. Click **Setting** application procedure.
2. Click **Storage**.
3. Check the available space of SD card.
4. Check the MID internal storage space.

### Safely remove SD card

Safely remove SD card can protect SD card and extend working life of SD card.

1. Click Setting application procedure.
2. Click Storage.
3. Click Remove SD card.
4. Now it is safe to remove SD card.

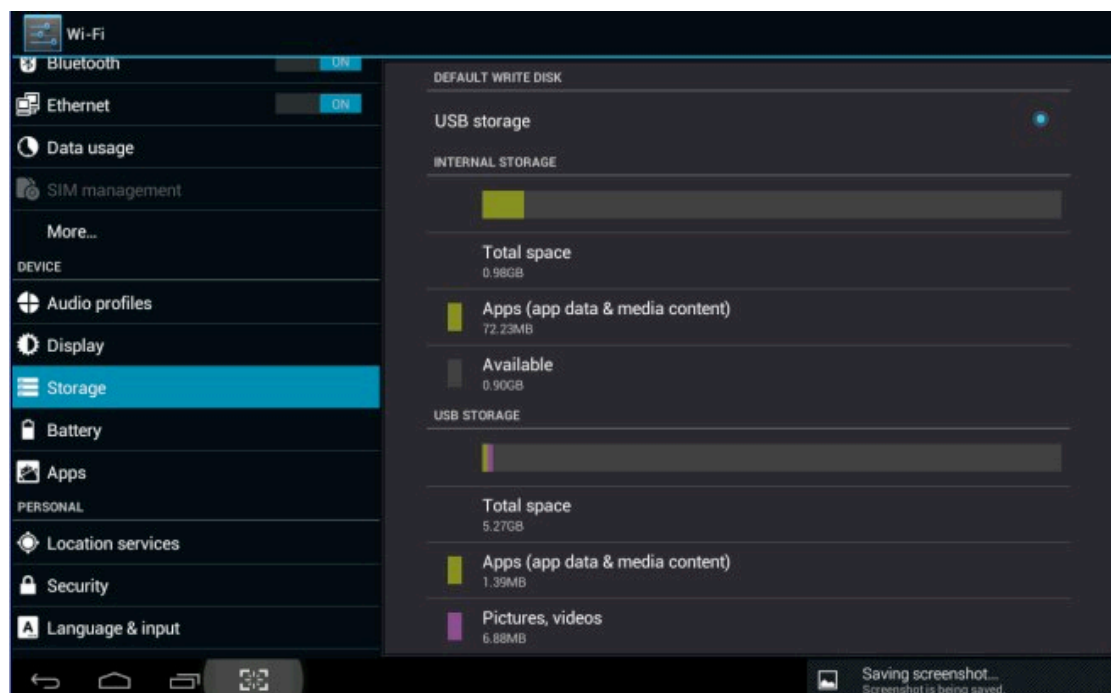


**Remark: Removing SD card safely can protect SD efficiently and extend SD card lifetime.**

## 7.6 Date and Time

According to the preset, system will automatically apply the date, zone, and time provided by internet.

### Manual set date, time and zone

 1. Click Setting application procedure.
2. Slide down the screen, then click **date and time**.
3. Turn off “auto setting of date and time”.
4. Turn off “auto setting zone”.
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click **Date setting**, then click upper or down button to adjust date, month, and year, click **setting** when you finish selection.
7. Click **Time setting**, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon ( there is no such selection when you se 24-hour format). Click **Setting** to finish.
8. Click **24-hour format**, switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.
9. Click date format setting, then choose the time format you want to show on MID.

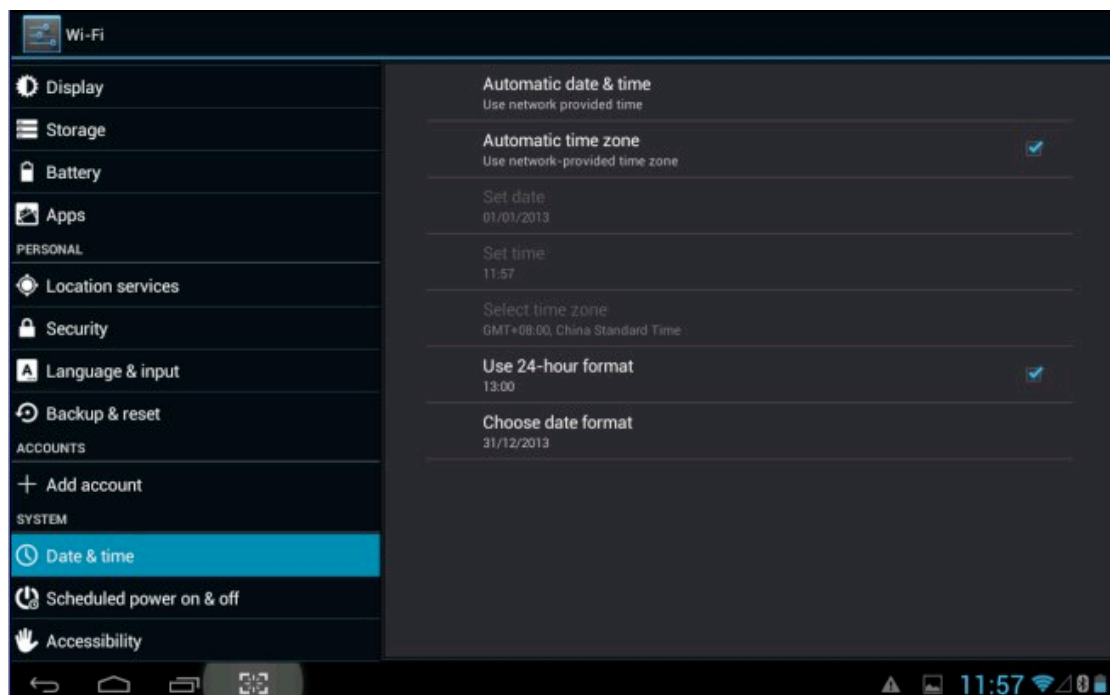

Note: If you use the time internet provided, you will not able to set the date, time and time zone.

## 7.7 Language Setting

1. Click **Setting** application procedure.
2. Click **Language and keyboard**.
3. Click **Language Selection**, then choose the language you want, slide down to view more languages.



## 7.8 About Tablet

### View the MID Status

1. Click **Setting** application procedure.
2. Click **About Tablet**, you can view the electric status messages and version No.so on.

### System update

 
1. Click **Setting** application procedure.
2. Click **About tablet**.
3. Click **System update**, update as steps. ( **Please make sure there is new version TF card in device before installation** )

### View system version

1. Click Setting application procedure.
2. Click **About Tablet**.
3. You can view model NO., electric volume and internal version.

## 7.9 Fixed-time Startup and Shutdown

1. Click **Setting** application procedure
2. Click **fixed-tine startup and shutdown**.
3. Operate as below Picture below

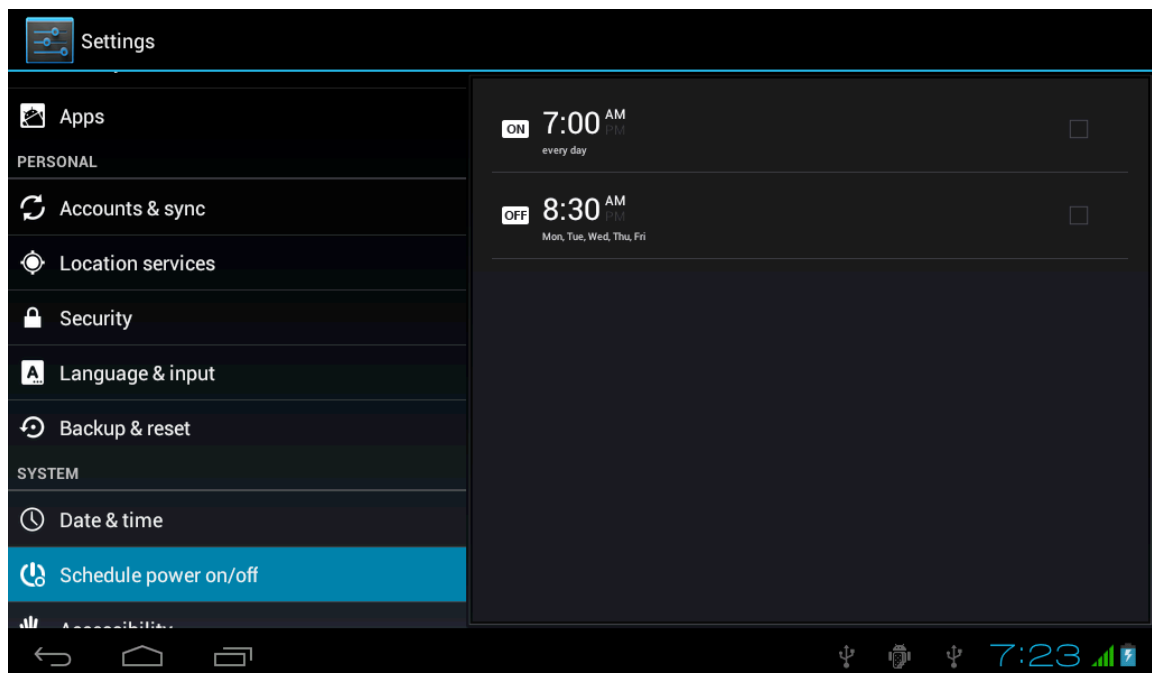

## 7.10 Safety Setting

 
### Set locked screen

Lock the touch screen by unlock icon or password to protect your MID.

Note: You should enter the password after setting screen locked.

### Set unlocked picture

1. Click setting application in main interface.
  2. Click **safe**.
  3. Click **locked the screen**.
  4. Choose **picture** in text setting area.
  5. Click next following the remind message.
  6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. As Picture below, move your finger from the screen when finish. The system will record your new unlock pattern.
1. Click **continue**.
  2. When you see the reminder, enter the unlock pattern, then click **confirm**.

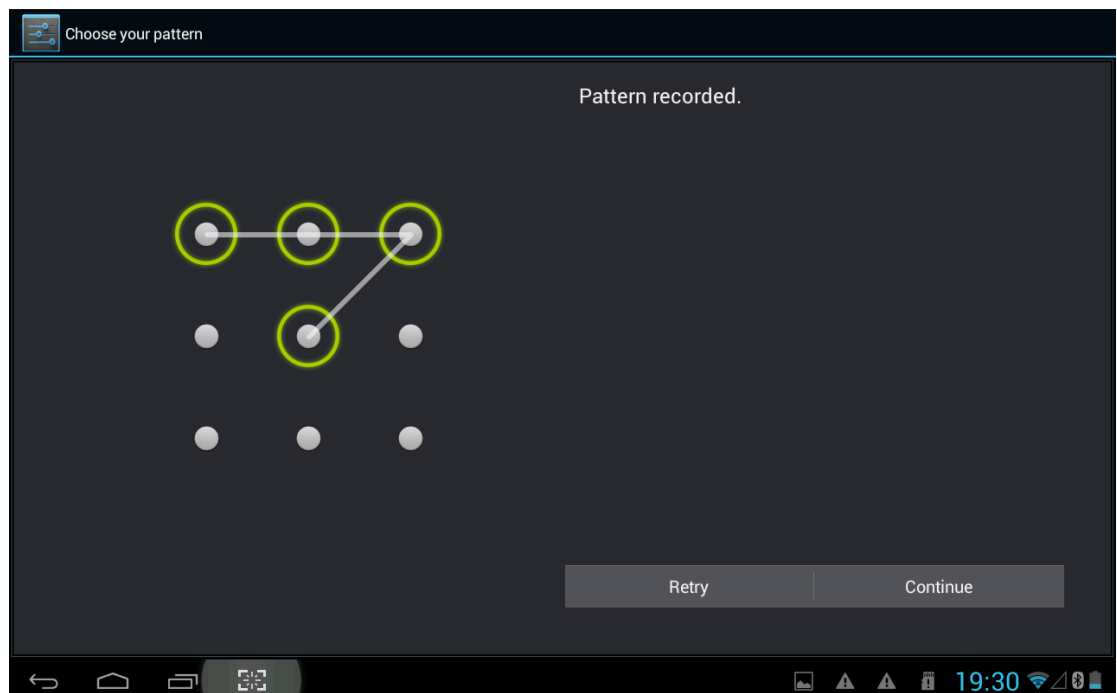

### Set unlock PIN code

1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked**.


4. Choose **PIN** in text setting area.
5. Enter new PIN code (numbers) and click **continue**.
6. Enter new PIN code again and click **confirm**.

 
### **Set unlock password**

1. Click **setting application** in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Set password in text setting area.
5. Set new password (letters and numbers) and then click **continue**.
6. Enter the password again and then click **confirm**.


## **8 Multi-Media**



### **8.1 Music**

Enter into music player: in menu or desktop click music  icon to enter into music player, click the music you want to play, as Picture below:

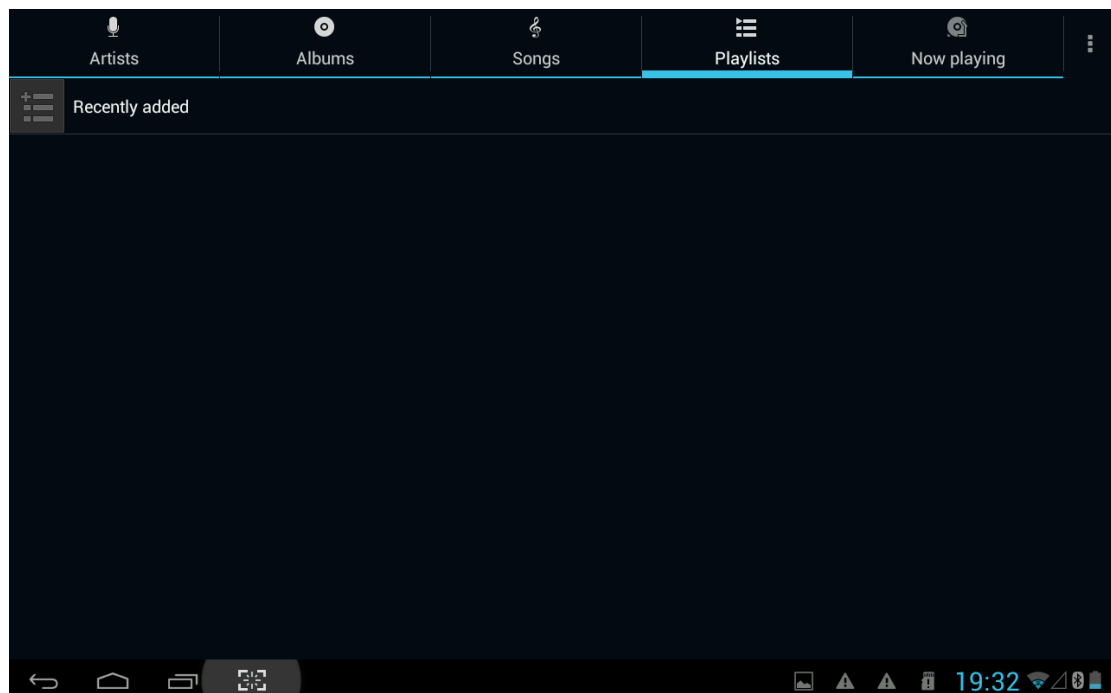

## 8.2 Video

  - Enter video player: choose  application in main menu, choose the video you want to play, as Picture below
- Operation of video player button as Picture below

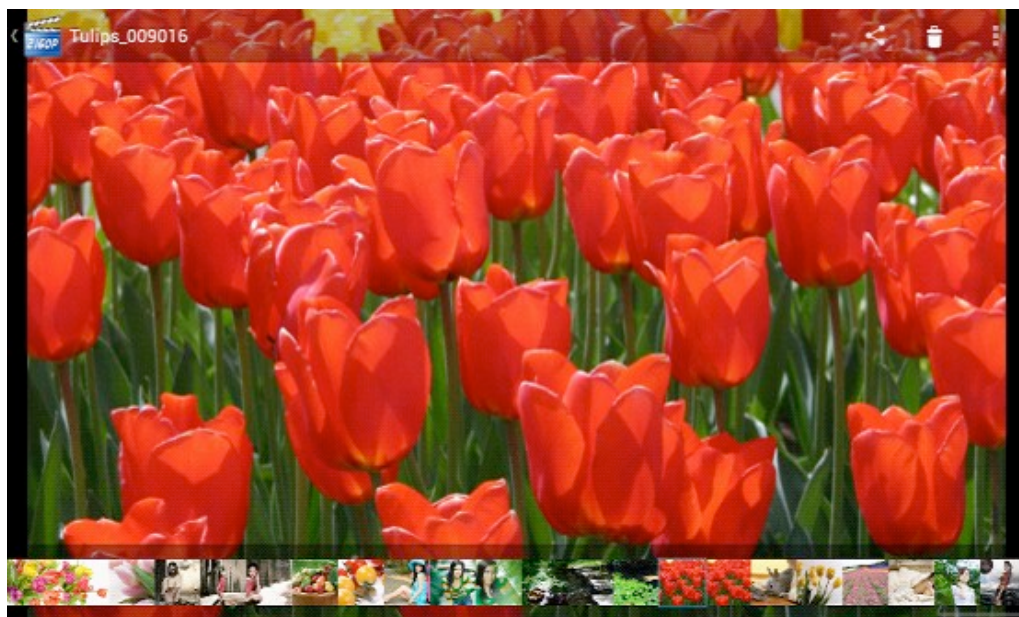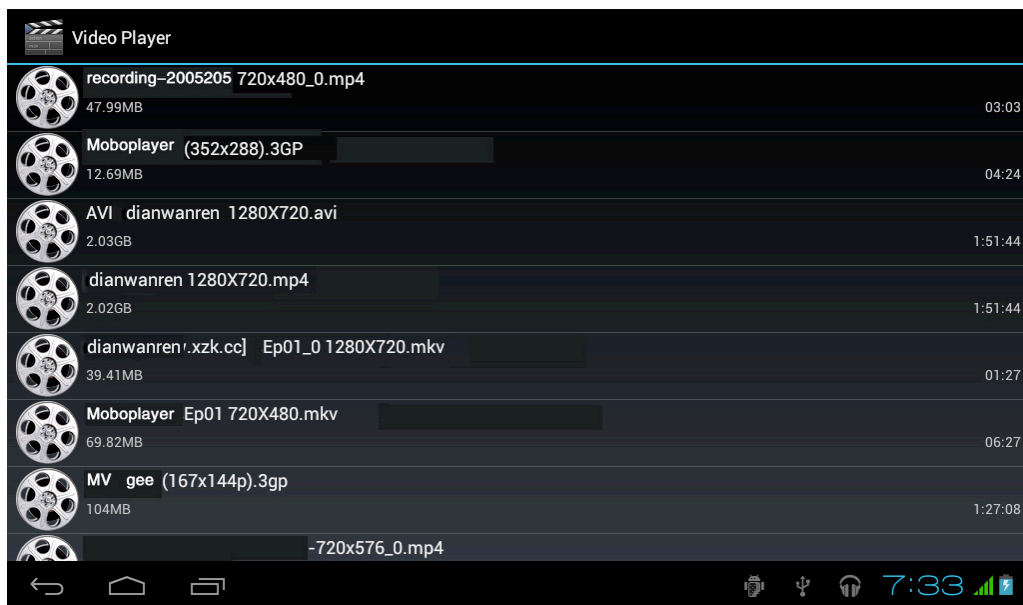

## 8.3 Photo Gallery

**Photo gallery** application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

### View pictures


1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.

Note: when you browse the pictures, slide left or right to view more pictures.

### Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

#### ● Slide Show

1. Open a picture, use virtual key to click menu key, display menu selection.
2. Click **slide show**, it will auto loop play(or choose  button in picture folder)

#### ● Crop

1. Click **menu** key to display menu selection.
2. Then click crop, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjust the size you want, click **crop**.
5. If you wish to give up to crop, click **cancel** to return to picture browse.

#### ● Edit

 
1. Click **menu** key, display the menu selection.
2. Click **edit**.
3. Adjust the brightness, style, color, antialias setting in selection.
4. Click **save**.
5. If you want to give up edit, click **return** key, click **not** to return to picture browse.

## 8.4 Camera



In the main interface or desktop, click camera application procedure, enter into camera

- Operation of camera button as Picture below
- Switch camera: choose **Menu** key, click **switch front/back camera**, as Picture below

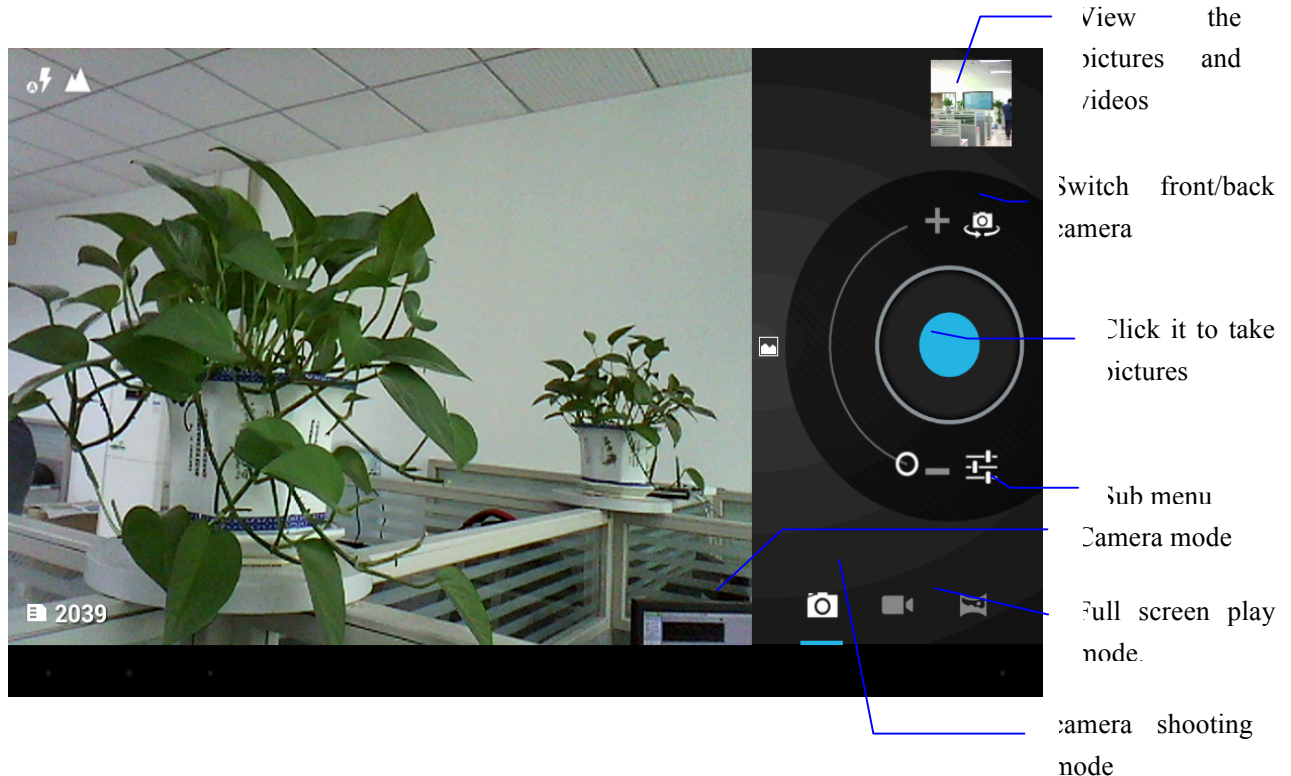

## 8.5 Connection of HDMI

 
Use HDMI connection, set HDMI output method; MID connection and high definition TV, play the video in full screen mode, the resolution can reach 720P.

**Remark: HDMI connection is required to a standard HDMI connection to connect. High definition TV should be adjusted as HDMI output.**

## 8.6 FM Radio




Click in the main interface or desktop to enter into FM radio interface:

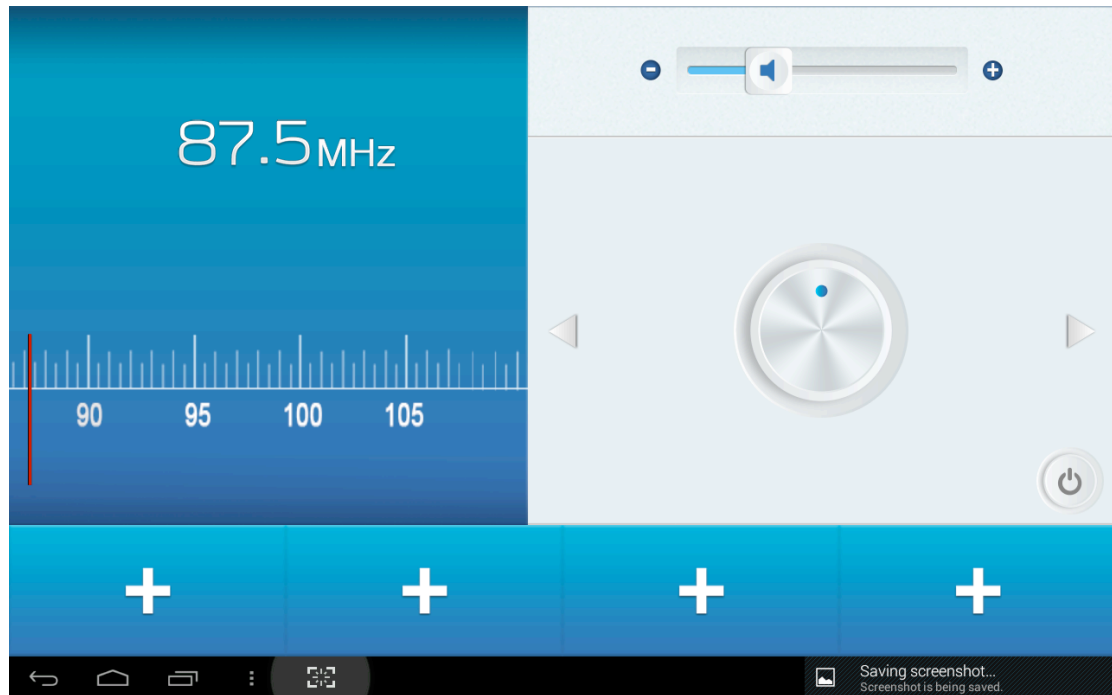

## 9 Communication Function

### 9.1 Phone

 - 1 Click **Phone** application procedure
- 2 Operate as Picture below

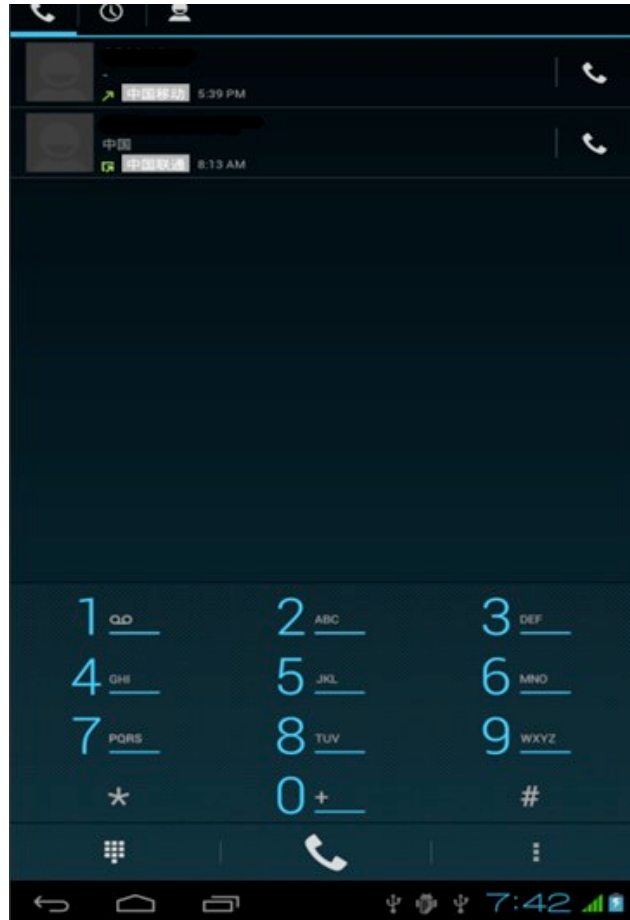


## 9.2 Text Message

- 1 Enter into main menu, choose  application procedure.





 
2 Click **“Edit new message”**

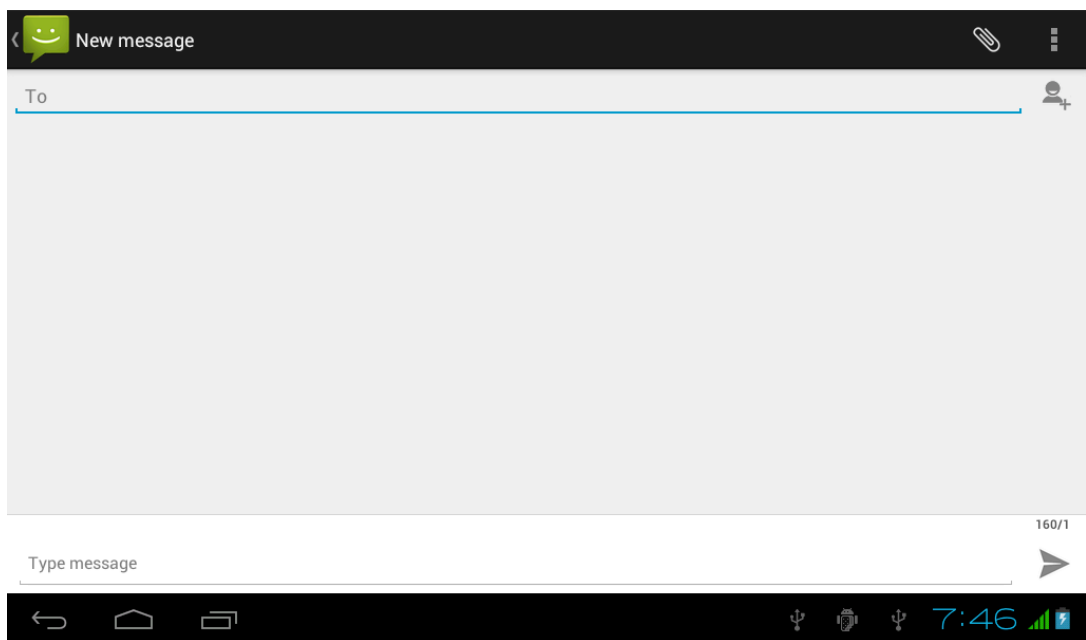



## 9.3 Contact List

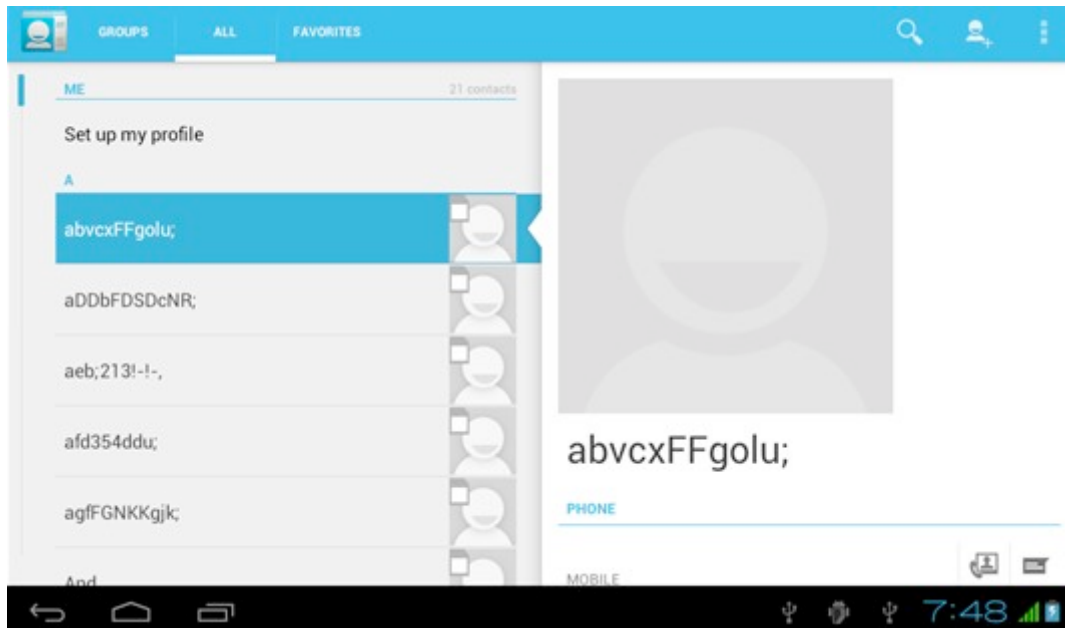 


Click Contact list in the main interface, enter into the contact list as Picture below




- Search contact: click  button, enter into search function
- Add contact: click  button, enter into add contact interface.


# 10 Internet
 
## 10.1 Browser

Click IE browser  in the main menu or desktop to enter the IE interface, as Picture below

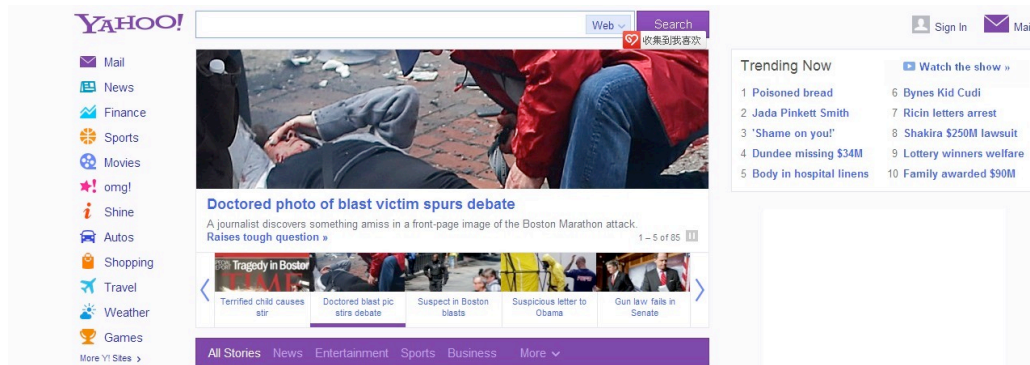


 Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture below

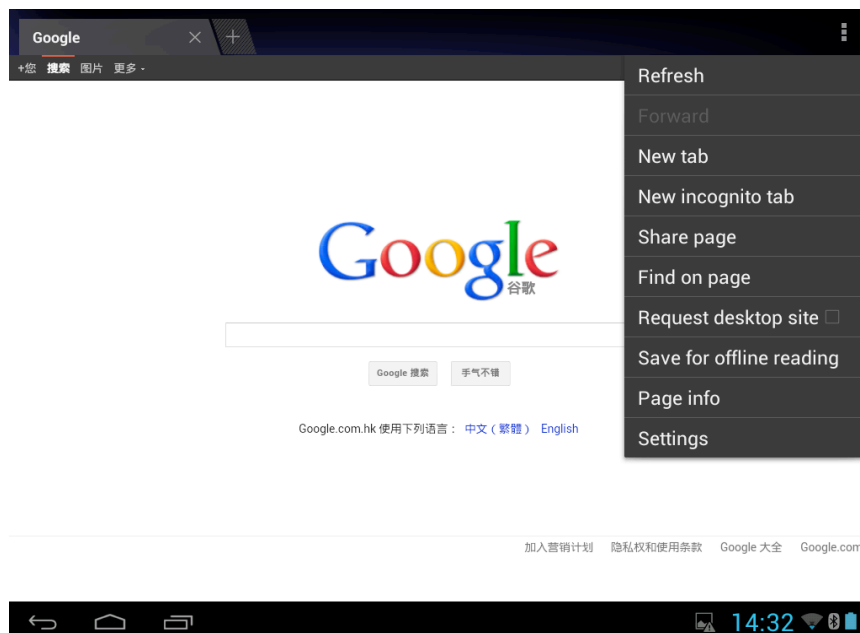


## 10.2 Email

 **Email** application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163),as Picture below

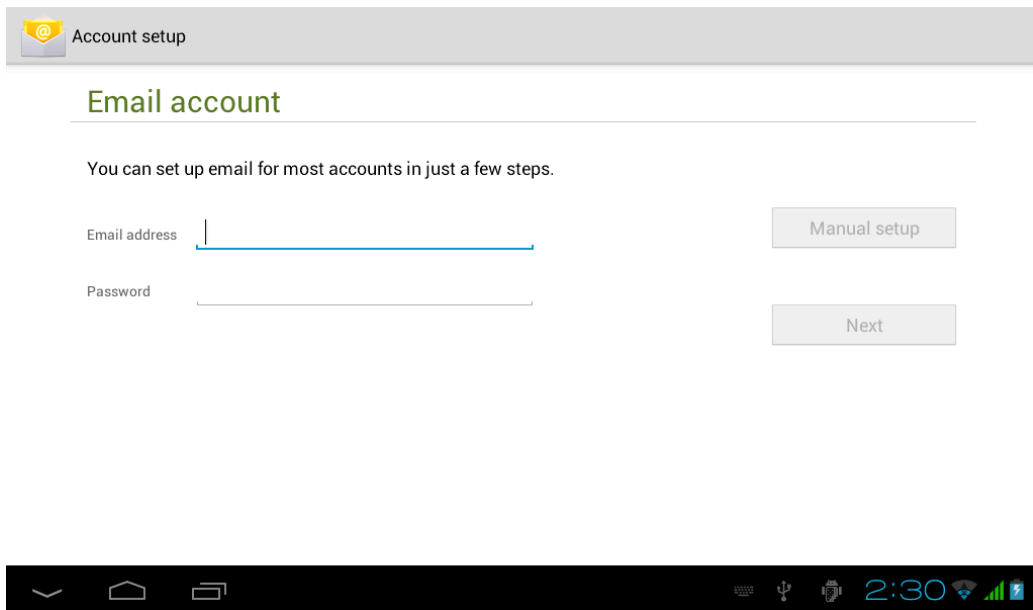

#### a. Email Setting

1. After you click the sending email icon , you can see the email setting guide, which can help you to set.
2. Input your email address and password.
3. Click “Next step” button, choose your email type is POP3 or IMAP.
4. Click “Next Step” button to check whether the email box servicer can receive or send emails
5. Input the email account and display the email subject, and click **finish**.
6. If the email box is available, you will enter into your mail box automatically.


#### b. Delete the email account


You can delete setted POP3 or IMAP email account from your MID.

 
Click .

1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirm to remove.

#### c. Send E-mail

1. Click  to display your mail box.

2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
3. Press Menu key. Menu will popup.
4. Click **Edit**  to enter into new email editing interface.
5. Input the receiver's email address.
6. Input the subject and email content.
7. If you want to add attachment, click menu key, the menu popup.
8. Click "Add attachment" (pictures, video).
9. Click "send" to send the email out.

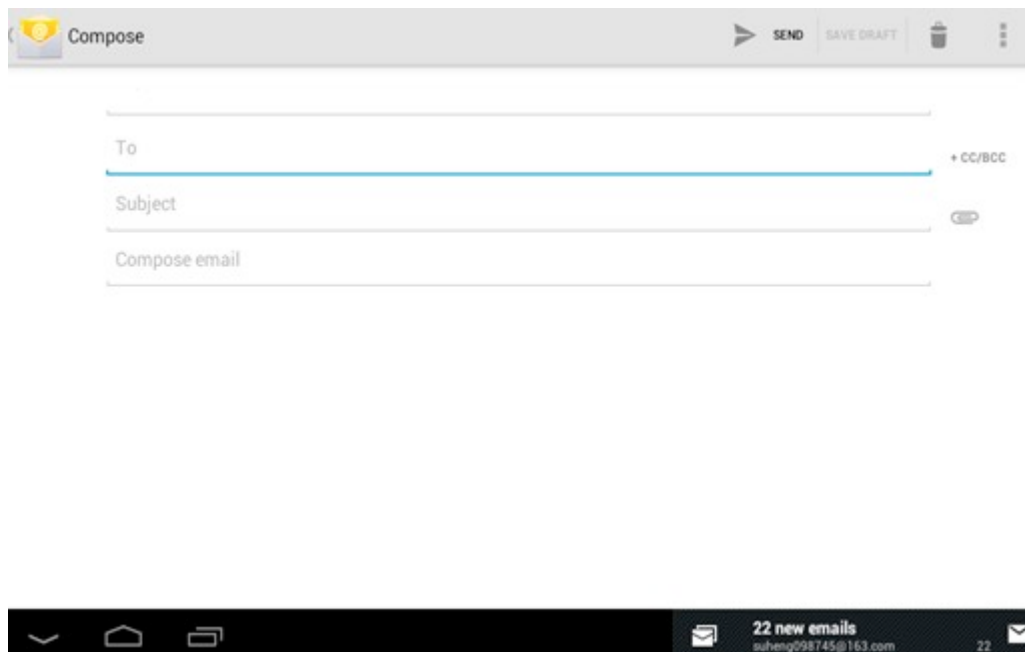

## 10.3 3G Internet

1. Turn off the device and plug in 3G card.
2. Turn on the device.
3. Unlock to enter into system, make sure the MID can search signal.

(Note: 3G internet can't be used with WiFi Internet at the same time, the system is defaulted to use Wifi Internet. If you wish to use 3G internet, please turn off WiFi Internet.)

# 11 GPS Function

## 11.1 GPS Navigation

Map of the third parties is required for MID internal GPS satellite signal receiver positioning, after installation the device can accurately implement traffic real-time navigation, meet the needs of outdoor navigation.

## 12 Other Application Procedures

### 12.1 Clock


Click **Clock** procedure, enter into below interface as Picture below

There are clock, picture, music and homepage buttons.



### 12.2 Calculator




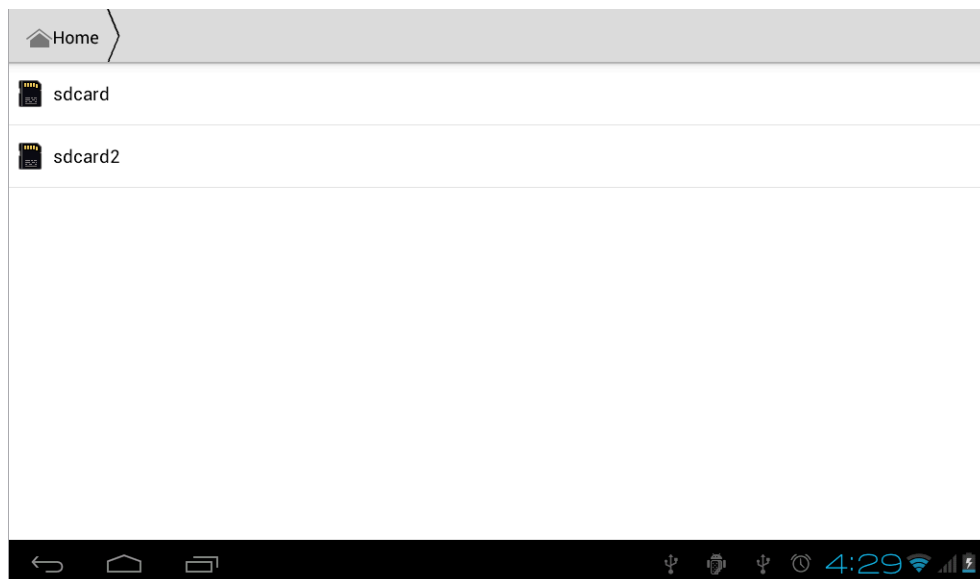 
1. Click .
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.



## 12.3 File Manager

 
File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.

In the main menu or desktop, click the document manager icon  to enter into documents manager.




a、Copy, cut, delete, rename the files and folder: choose the file or folder, long press the file or

folder to enter into the interface as Picture 8.4, you can operate the file or folder.

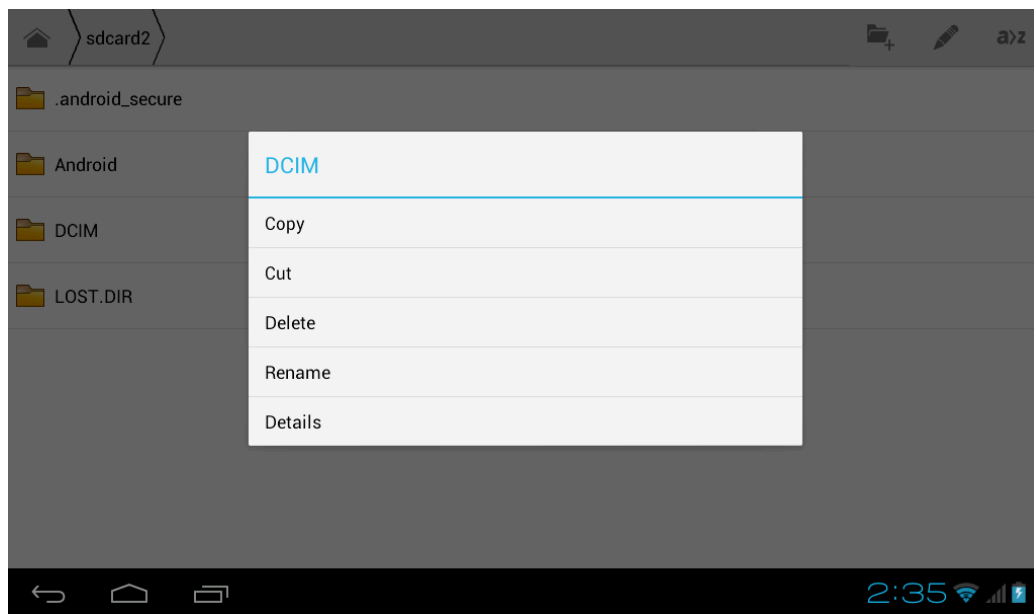

 b、 Choose any file, long press it, it will pop up “share”, choose the share way you want in the list

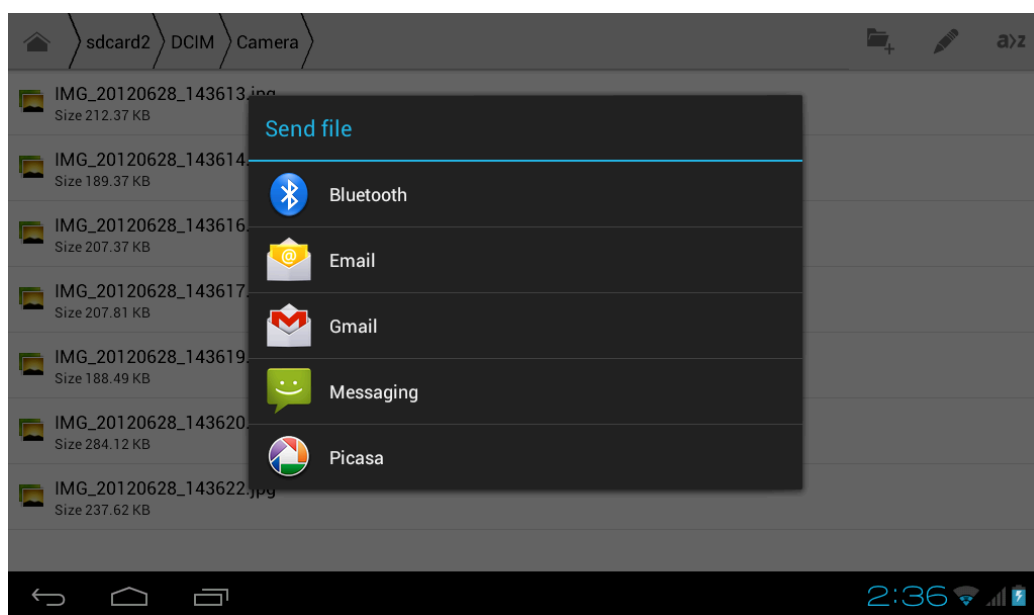





c、 Install Apk file: Choose the file suffixed .Apk in the file manager, you can install the third part software as reminder.


d、 Build new folder: Choose the menu you want to build the file, click Menu key, choose new folder, you can build new folder as reminder.



## 12.4 Recorder

 In the main interface or desktop, click recorder icon  to enter into record interface, click record key  to start record. Click Stop key  to stop recording. Click Play key  to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually.

Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

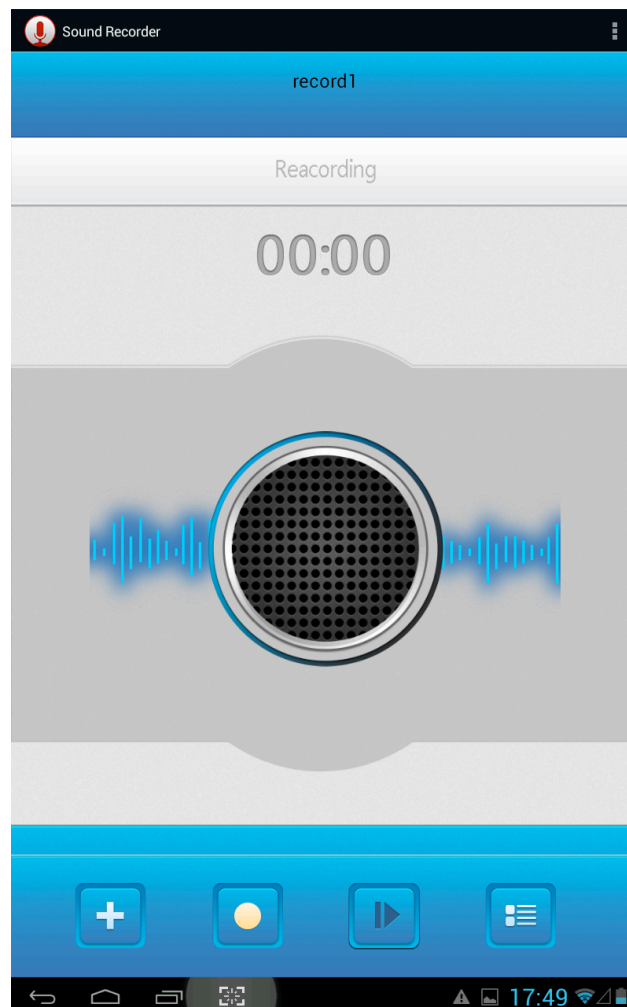

## 13 Installation of Procedures

### 13.1 Installation

#### Install the third party application procedure

You can gain the third party application procedure which match the Android system from internet, and install it by yourself in MID. Copy the application procedure into SD card, and insert in the MID.

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
  1. It popup **install**, click **install apk**.
  2. Finish the installation as guide, it will operate.

**Note:** The third party procedure searched from internet to use on the system are all suffixed with **.apk**.

### 13.2 Uninstall

#### Uninstall application procedure

1. Click setting icon in main interface.
2. Click **manage application procedure**, list all the application procedures installed in the system.
3. Click the APK you want to uninstall, click **uninstall**.
4. Click **confirm** to finish uninstallation.

**Skill:** The procedure manager installed by system has many convenient methods to uninstall, after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

### 13.3 Update Path

#### Update the application procedures of Android system

- ◆ Download the latest application procedure from appointed website.
- ◆ Download form the Android system related software forum in the internet.

# 14 Troubles Shooting

## 1. The first startup of MID is slow

After the MID system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

## 2. MID can't connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the MID and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

## 3. MID feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

## 4. Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

## 5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key**(next to power port) to reset the system.

## 6. The webpage can't be opened

- Please keep the distance between from route to MID in effective range.
- Please restart WIFI and try again.

## 7. MID works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resources.

## **FCC RF EXPOSURE INFORMATION:**

**WARNING!! Read this information before using your phone**

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and order **FCC 96-326** adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

## **BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications,

or attachments could damage the phone and may violate FCC regulations.

#### **NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

#### **TIPS ON EFFICIENT OPERATION:**

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

#### **RF Exposure Information:**

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is **1.183W/kg**. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10□ or maximum over 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.---WIFI









G10



[WWW.ICEMOBILE.NET](http://WWW.ICEMOBILE.NET)